
WARM-WATER AND HOT-WATER BOILERS PB-V PB-H



PBS INDUSTRY, a.s. Průmyslová 162 674 01 Třebíč ČESKÁ REPUBLIKA

Tel.: +420 568 504 111 Email: pbstre@pbstre.cz Web: www.pbstre.cz

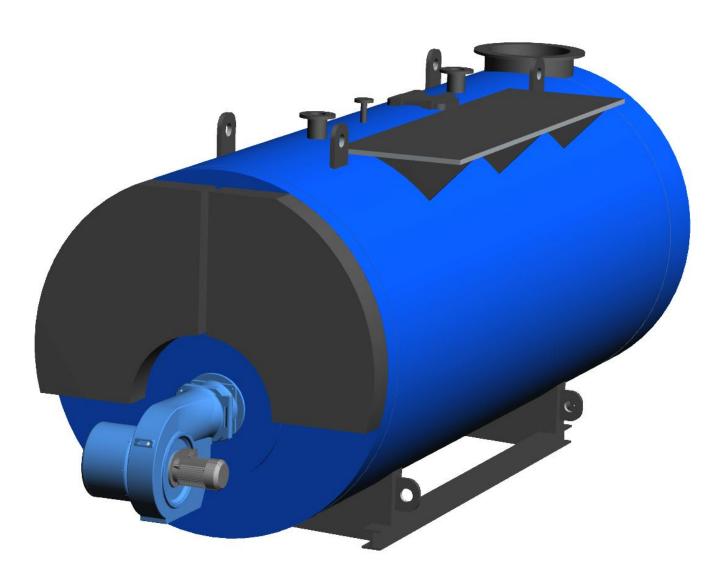

TPB-V, PB-H Series

Three-pass warm-water and hot-water boilers combusting gaseous and liquid fuels In compliance with the requirements of standard ČSN EN 12 953 and directive EC 97/23

> PBS INDUSTRY, a.s., Průmyslová 162, 674 01 Třebíč, Czech Republic IN: 269 79 888 Web: www.pbstre.cz



Design

The boiler body consists of a cylindrical shell, two reinforced bottoms, a symmetrically bedded boiler flue, a water cooled inflective chamber and a ring nest of stay tubes of the second and third pass. The front inflective chamber is not cooled. It is closed with a door enabling cleaning of the generating surfaces. Boiler venting is provided by a flue gas collector in the rear part of the boiler. Flue gas discharge is realized via a chimney neck with an upper or rear outlet.

Equipment

The boiler body is equipped with a relief valve and draining. The outlet and reverse necks are fitted with adaptors with lugs for installation of measurement and regulation instruments. Beneath the return water inlet neck there is an injector increasing the output temperature.

Hot-water boilers are additionally equipped with a pressure limiter. Warm-water boilers are additionally equipped with a temperature limiter, namely up to 110°C.

Manholes together with inspection holes enable inner revision of the boiler.

Efficiency

The heat contained in flue gasses leaving the boiler can be transferred to return water in the exhaust-heat exchanger. Energy gained this way increases the boiler efficiency of up to 7% reducing thus the fuel consumption.

Economizer

It supplements the basic design of the PB-V and PB-H boilers. It can be integrated into the flue gas collector or autonomously placed at the flue gas outlet.

The economizer provides a highly efficient heat transfer - the counter-flow principle. It consists of nests of finned or plain tubes in the flue gas channel with admission in the water chambers.

Flue gas exchanger connection

With regard to the boiler output and the design efficiency two basic types of the exchanger connection are distinguished.

Version with a full flow - all the return water flows through the exchanger, where it is preheated.

Version with a partial flow - only a part of the return water (10 - 30%) flows through the exchanger. Before the boiler inlet the rest of the return water mixes with heated water from the exchanger. This version is mainly used for boilers with a higher flow rate of recirculation water.

Modifications

The design of the boilers enables using an identical construction for both warm-water and hot-water boilers, namely up to pressure of 16 bars.

BASIC TECHNICAL SPECIFICATION

- Output 760 ÷ 25 000 kW
- Operation overpressure 6 ÷ 25 bar(g)
- Warm-water or hot-water version
- In compliance with technical requirements ČSN EN 12953


FUEL

- Natural gas
- Propane, propane-butane
- Low calorific power gasses biogas
- Oil fuels

ADVANTAGES

- High lifetime
- Economical operation
- Combustion of different types of fuel
- Low combustion area load
- Large-capacity boiler
- Design customization
- High-quality warranty and post-warranty service
- Boilers in connection with low-emission burners meet the legal emission limits for gaseous and liquid fuels



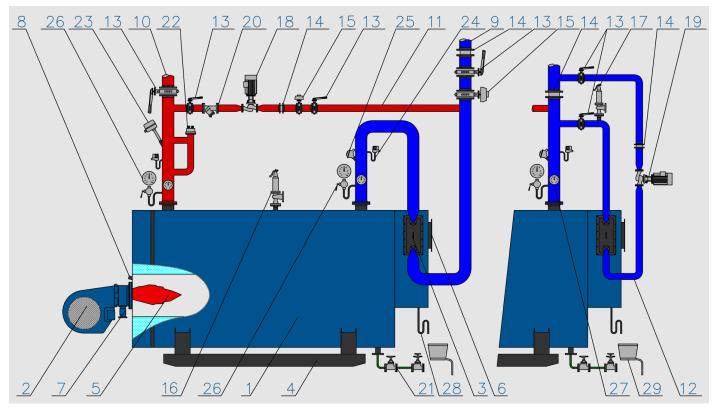

BASIC CONNECTION DIAGRAM WITH FULL AND PARTIAL FLOW FOR BOILER TYPES PB-V AND PB-H

- 1) Boiler
- 2) Burner
- 3) Economizer
- 4) Base
- 5) Boiler flue
- 6) Flue gas outlet
- 7) Fuel supply
- 8) Sight glass into the flue
- 9) Return branch
- 10) Output branch
- 11) Shorting circuit
- 12) Partial flow via economizer
- 13) Shutting flap
- 14) Check valve
- 15) Damper

- 16) Relief valve
- 17) Economizer relief valve
- 18) Shorting pump
- 19) Economizer circuit pump
- 20) Filter
- 21) Draining, blown-down
- 22) Water incursion check
- 23) Emergency thermostat
- 24) Manostat
- 25) Temperature sensor
- 26) Manometer
- 27) Thermometer
- 28) Condensing loop
- 29) Neutralization box




BASIC TECHNICAL DATA

Boiler type	Maximum output	Pressure loss flue gas side	Indicative boiler length * (A)	Indicative boiler width (B)	Indicative boiler height (C)	Boiler weight without water	Service weight
	[kW]	[Pa]	[mm]	[mm]	[mm]	[kg]	[kg]
PB-V760	760	520	3 300	1 510	1 790	3030	4900
PB-V1000	1 000	580	3 860	1 580	1 860	3750	6220
PB-V1200	1 200	560	3 960	1 850	1 860	3890	6360
PB-V1600	1 600	620	4 070	1 800	2 080	4510	7910
PB-V2000	2 000	710	4 370	1 900	2 215	5360	9610
PV-V2500	2 500	680	4 570	1 960	2 275	6000	10630
PB-V3000	3 000	750	5 010	2 100	2 500	7110	13260
PB-V4000	4 000	820	5 400	2 150	2 550	8310	14860
PB-V5000	5 000	840	6 150	2 230	2 630	10100	18400
PB-V6000	6 000	890	6 550	2 400	2 800	12710	23830
PB-V8000	8 000	910	6 950	2 570	2 975	15700	28480
PB-V10000	10 000	1 100	7 350	2 750	3 190	17830	33740
PB-V12000	12 000	1 250	7 825	2 850	3 260	20610	38870
PB-V14000	14 000	1 500	on request				
PB-V16000	16 000	1 650	on request				
PB-V20000	20 000	1 800	on request				
PB-V25000	25 000	2 000	on request				

* without burner

** up to the pressure of up to 13 bar(g) the dimensions are identical. Dimensions for higher pressures on request. Changes reserved!

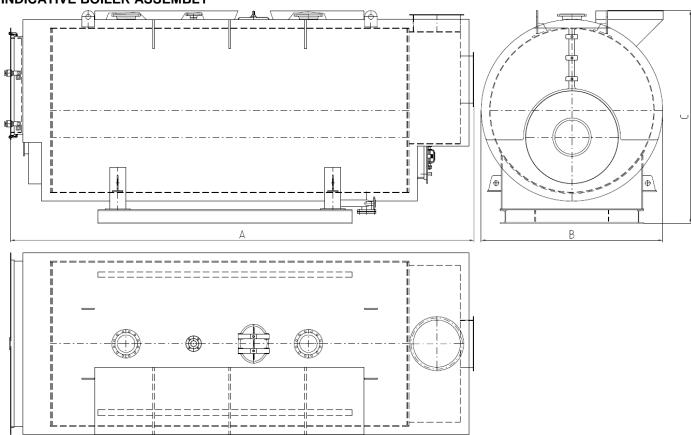

INDICATIVE BOILER ASSEMBLY